




AquaAir Triple Strike Bag with Arms


Assembly instructions

Item No.: HIT00921

HIT BOXING

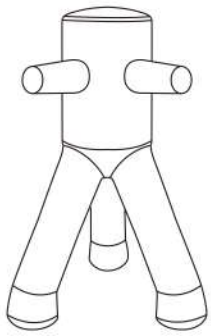

x1

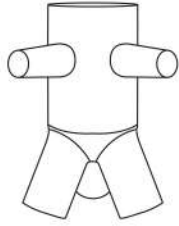


x1




x1




x1

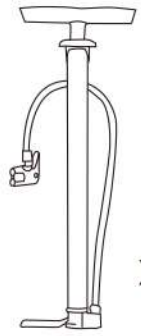


x1

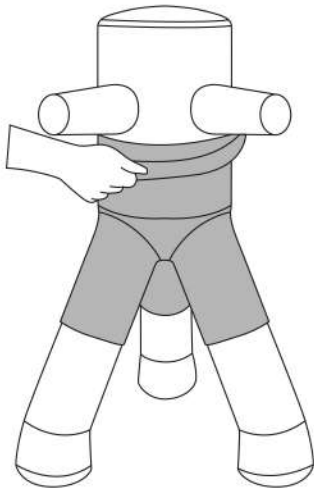


1. Place the outer cover as shown in the diagram.

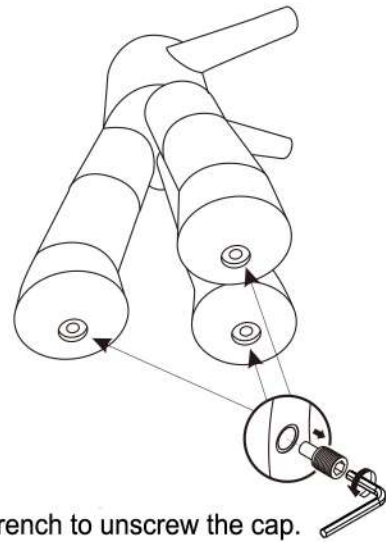


2. Use a hex wrench to unscrew the cap.

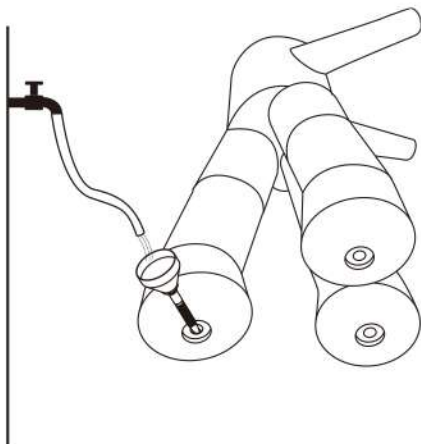

3. Fill water into the three designated positions using a funnel.

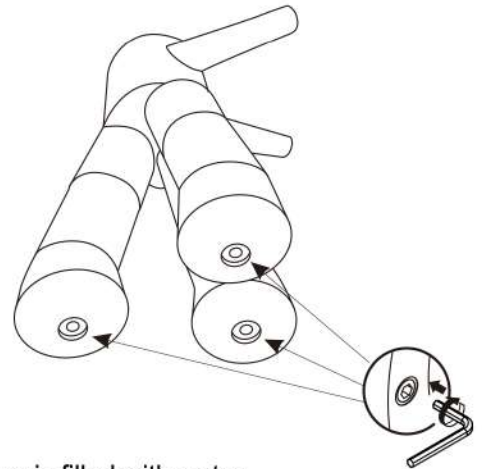

4. Once the base is filled with water, screw the cap back on with the hex wrench.

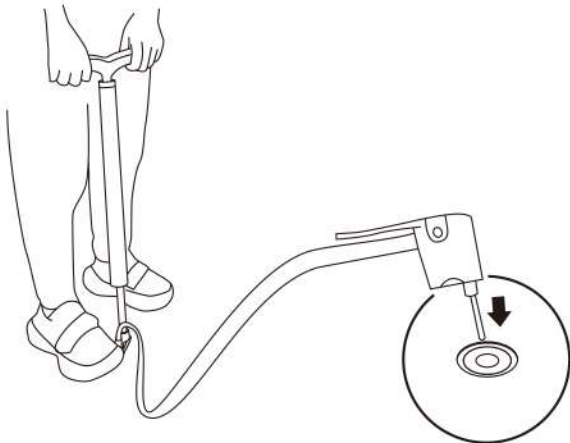

5. Use a pump to inflate the top part as shown in the diagram.

